




**MAP COFFEE MIA**  
CAPSULE COFFEE MACHINE

# INSTRUCTION MANUAL

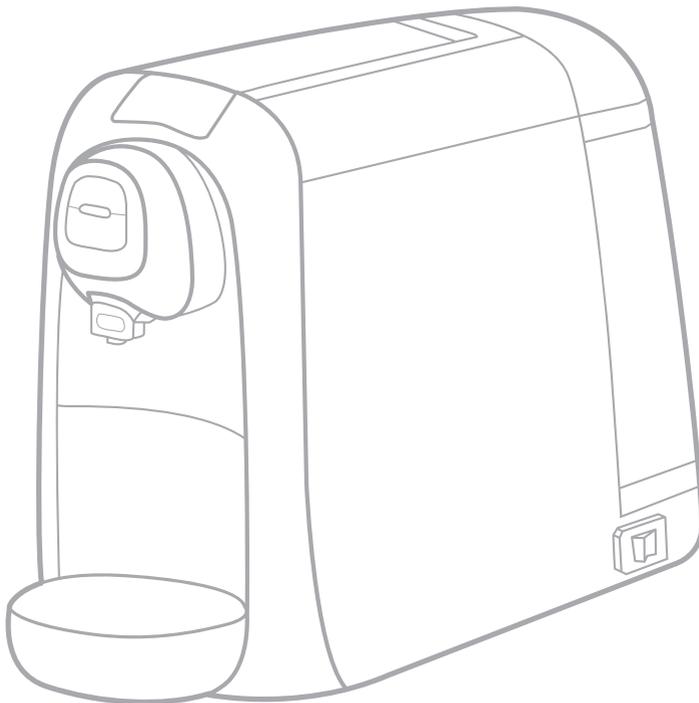

**MODEL:** CM4725-AB

Read this manual thoroughly before using and save it for future reference

---

## IMPORTANT SAFEGUARDS

When using electrical appliances, these basic precautions should always be followed:

1. Read Instruction manual carefully.
2. This appliance is suitable only for the use of Map Coffee capsules. The use of other capsule systems may void your warranty.
3. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
4. To protect against fire, electric shock and injury to persons do not immerse cord, plug or unit in water or other liquid.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before inserting or removing parts and or before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorised service facility for examination, repair or adjustment.
8. The use of accessories not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surface.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Do not use appliance for other than intended use.
13. Only fill the tank with clean and cold water. Never fill the tank with mineral water, milk or other liquids.
14. To disconnect, remove plug from wall outlet. Always hold the plug. Avoid pulling the cord.
15. Some parts of appliance are hot when operated, so do not touch with hand.
16. Do not leave the appliance on unattended.


---

## **IMPORTANT SAFEGUARDS**

Continued...

17. The environment temperature of operating or storing shall be more than 0 degrees Celsius.
18. Do not leave the appliance exposed to atmospheric agents (sun, rain and so on)
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or instruction concerning use of the appliances by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance.
21. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
22. Do not let the coffee maker operate without water.
23. Do not use outdoors or for commercial purpose.
24. The coffee capsule is disposable, never reuse the same capsule.
25. This appliance is intended to be used in household kitchens and similar applications.
26. Save these instructions.
27. DO NOT PUT FINGERS IN CAPSULE HOLDER
28. To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

## KNOW YOUR COFFEE MAKER

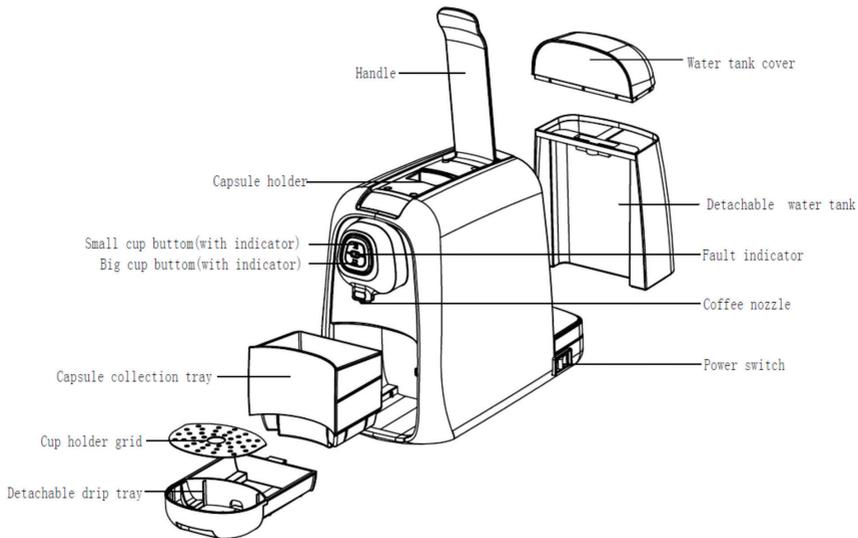

## FIRST USE

Check that all accessories are complete and the unit is not damaged.

- Fill water tank with cold water.
- Lift the handle to open position and then immediately lower the handle (close position).
- Place a container on the cup holder grid, insert the plug, turn on the power switch and the two button indicators will flash, and wait until the indicators are solid.
- Press the large cup button where the coffee nozzle will begin to release water. The flow will stop automatically. Discard the water. Clean all detachable parts thoroughly with warm water.

**NOTE:** While pressing down the big cup or small cup button, the machine may produce a loud sound, this is normal. The sound tells you that the pump / machine is preparing for brewing coffee.

---

## USING YOUR COFFEE MAKER

1. Fill the detachable water tank with drinking water. The water level should not exceed MAX level marked on the tank.
2. Open the handle by lifting it and insert a coffee capsule. Close the handle by pushing it down directly.
3. Plug the power cord into the outlet. Turn on the power switch and the two button indicators will flash white, the appliance starts to preheat. Wait until they turn to solid lighting. This means the preheating is finished. You can now brew coffee.

**CAUTION:** During brewing, never open the handle. Otherwise the coffee capsule will be expelled into collection tray.

4. Once two button indicators are solid lighting, press the big cup or small cup button, the coffee will flow out from the coffee nozzle. Once the desired quantity has been reached (approx. 30ml for small cup, 60ml for big cup), the coffee will stop flowing automatically.
5. Once you have made coffee always expel the capsule. Capsules are automatically expelled into the capsule collection tray once the handle is raised.

**CAUTION:** Never raise the handle during brewing cycles.

6. The amount of coffee for small cup and big cup can be reprogrammed to suit your desired length. Simply press and hold the small cup button or big cup button, the corresponding button indicator will flash white and the machine will enter coffee quantity adjustment mode, when your desired quantity is reached, release the small cup button or big cup button. The machine will memorise this coffee quantity for next use. To restore factory default setting, simply press and hold the small cup and big cup button for 5s, blue indicator will flash 5 times, it means the machine has restored factory default setting.

**Note:** the adjustable range is 20ml-150ml.

7. Empty the capsule collection tray and rinse the unit and tank frequently.
9. Always turn off the power switch and disconnect the power supply when not in use.

---

## CLEANING AND MAINTENANCE

Be sure to unplug this appliance before cleaning. To protect against electric shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet. We recommend that the following is performed on a periodical basis:

1. Use the specifically provided empty capsule; prepare 1 or more cups to wash the coffee distributor.
2. Use a dry cloth to wash the removable water tank.
3. Empty the capsule collection tray and clean it.
4. Clean the capsule holder with a dry cloth.
5. Use a damp cloth to gently wipe the cup holder grid. Empty the capsule collection tray and rinse it.
6. Clean the machine using a damp cloth, never submerge the machine.
7. Replace all parts and keep for next use.

## DESCALING YOUR MACHINE

Descaling is a very important process in maintaining the longevity of your coffee machine as well as ensuring your coffee quality is never compromised.

During operation, if the fault indicator / warning is solid blue, it means your machine requires descaling i.e. you need to remove the mineral deposits inside the boiler.

Follow these simple steps:

1. Place the required volume of clean water to liquid descaler into the water tank (you will need to refer to the ratio mix of descaler to water as recommended by your particular formula. Please use **'household descaler suitable for domestic espresso machine only'**)
2. Once you have placed the liquid descaler into the tank, place a large mug under the coffee nozzle.

---

## DESCALING YOUR MACHINE

Continued...

3. Switch your appliance on from the power switch and wait till the unit is ready for use.
4. Press the small cup button or big cup button, the button indicator will still be flashing and the fault indicator will be solid blue.
5. The appliance will begin descaling. **This process will involve having to empty the contents of the tank through the machine and into your mug.**
6. Let approx. 30-60ml run through your machine and then stop the flow by pressing the same coffee button. Wait 1 minute and re-activate the cycle by pressing the same coffee button.
7. Repeat the above step approx. five times until the fault indicator is extinguished.
8. Remove tank and rinse thoroughly with warm water.
9. Refill tank with fresh water and run one full cup through without inserting a coffee capsule. This process will ensure any liquid descaler still remaining in the coffee lines will be washed through and your machine clean.
10. Descaling is now complete and you are ready to make coffee.

## TROUBLE SHOOTING

During operation, if the water tank is empty, the fault indicator will flash red. The details of display according to the following:

- (1) If the water tank is empty, the fault indicator will flash red, refill the water tank and press the big cup button or small cup button. The fault indicator will be extinguished and the corresponding button indicator will flash white; you can continue to brew coffee again.
- (2) During operation, if the fault indicator is solid lighting red, it means the appliance has malfunctioned. At this stage contact the Customer Care line contained in this manual for further assistance.

---

## ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!  
Please remember to respect the local regulations:  
hand in your disused coffee machine to an appropriate  
waste disposal centre.



Imported by Officeworks Australia.  
For Technical Assistance please call Map Coffee on 1800 239 438