

map
Italian coffee

Caffitaly

Caffitaly
system

OWNER'S MANUAL

Map Coffee
2-4 Buckhurst Street
South Melbourne VIC 3205
Free Call 1800 239 438
www.mapcoffee.com.au

OWNER'S MANUAL

PAG.2



Dear Customer,

We would like thank you for your preference. Your new espresso machine combines advanced technology and attractive, innovative design.


You will experience all the benefits of a brand new concept in coffee making that lets you prepare your favourite coffee by simply inserting a coffee capsule and pressing a button. Enjoy a range of coffee possibilities including light, medium and strong coffee.

IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all Instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons do not immerse the appliance body and/or the cord and/or the plugs in water or other liquid.
4. Close supervision is necessary when the appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
12. Do not use appliance for other than intended use.

Components

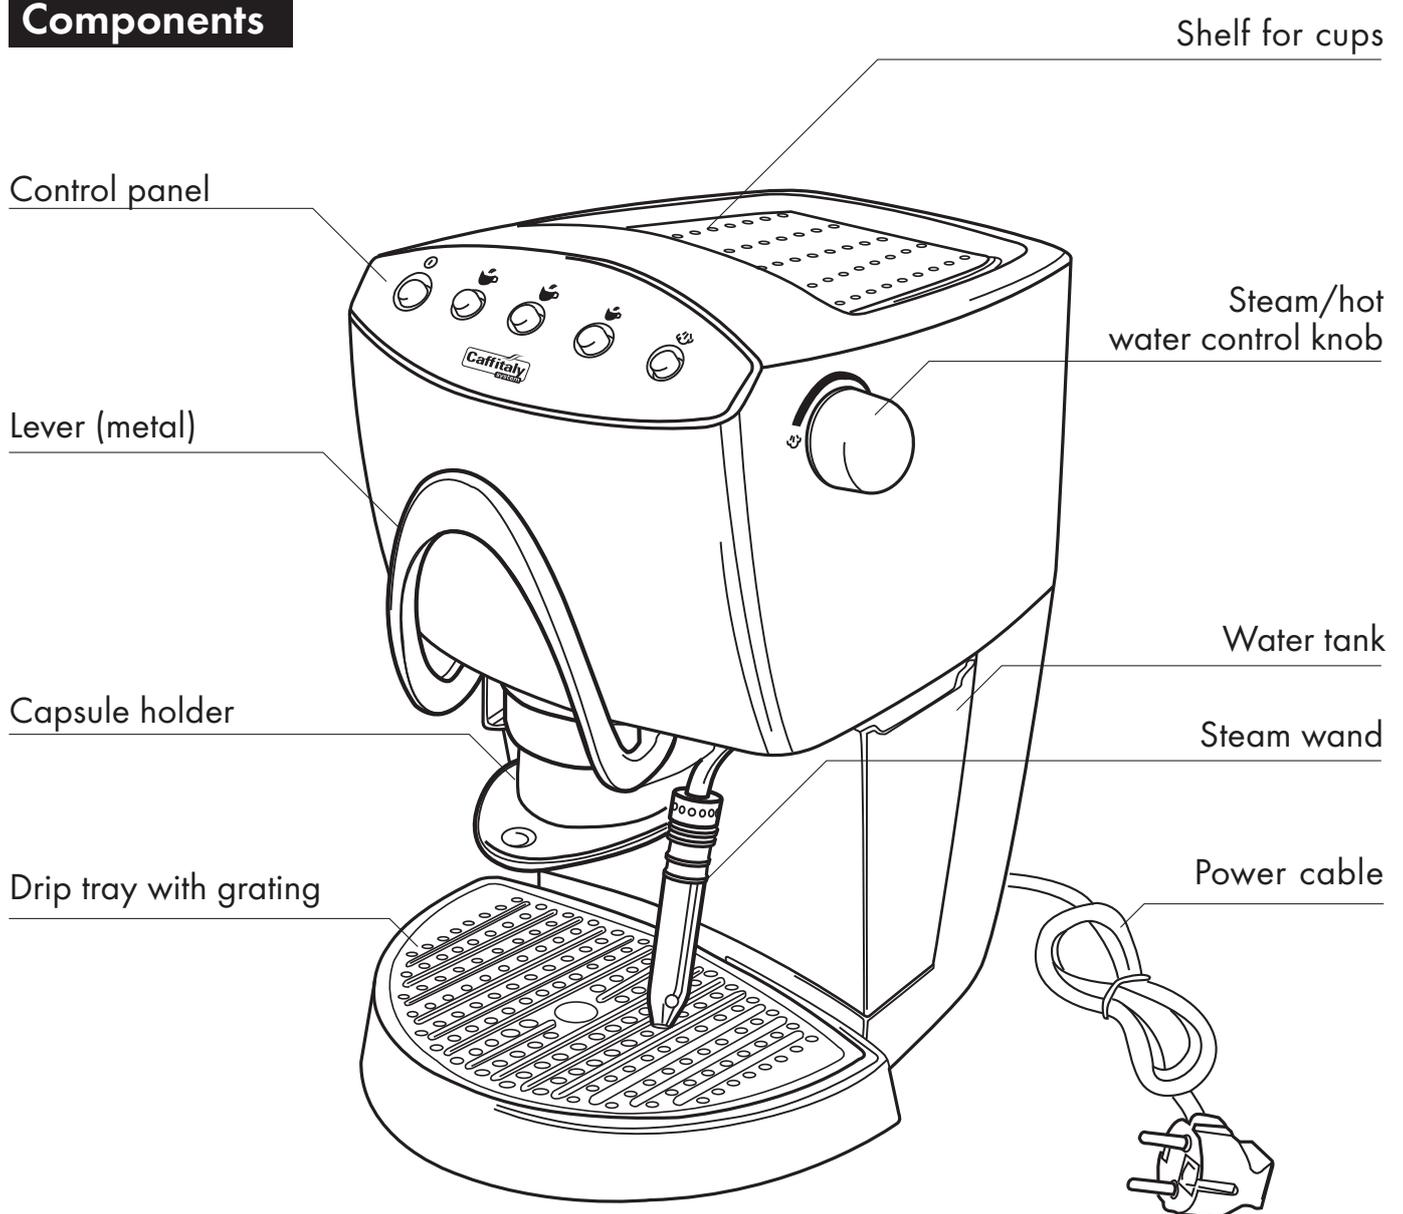

Control panel

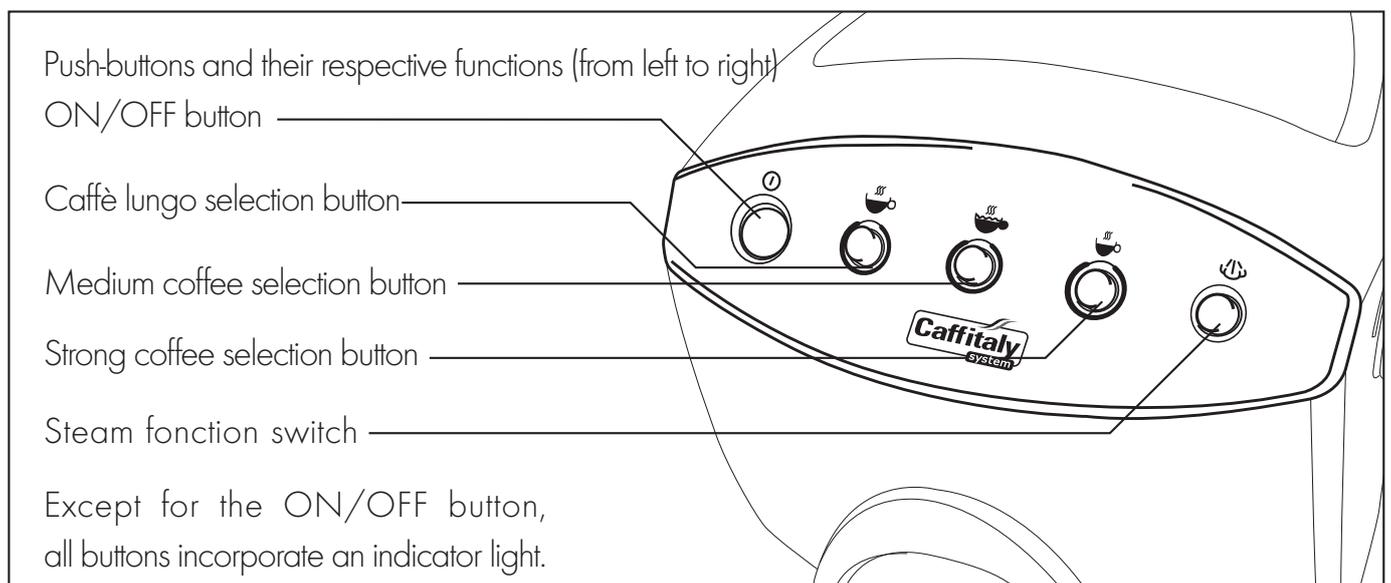

Text contained in this booklet has been accurately checked through. However, should any printing mistakes be found, you are kindly requested to inform the manufacturer. As part of our effort to constantly improve our products, we reserve the right to make any amendments to and update this publication without prior notice. No part of this booklet may be reproduced in any way of form, without the prior permission of the manufacturer.

All instructions that are important for user safety are marked with the symbol 

 This coffee-machine is equipped with safety devices. To prevent accidents or damage, you are strongly advised to read all the notices and to use the machine according to the instructions given in this manual. Retain this manual in a safe place for future reference. If the coffee machine is transferred to another user, the owner's manual should be supplied to the new owner with the appliance.

Technical data

Rated voltage	220-240V
Power	950 Watt
Protection class	I
Operating temperature	10 - 40 °C



The appliance should be disposed of in accordance with the relevant laws on the disposal of electrical equipment. For more information, enquire with the relevant office.



Intended use

The coffee machine is designed to be used with "CAFFITALY SYSTEM" capsules only and for:

- Coffee making
- Frothing milk and making cappuccino
- Dispensing hot water

Safety instructions

Electrical hazards

- To prevent electric shock, do not immerse the appliance, plug or power cable in water.
- Do not use the coffee-machine out in the open.
- Connect the machine to a power outlet with grounding system. The voltage must correspond to the voltage specified in the data plate under the machine.
- Do not use the coffee machine if the appliance itself, the power cable or the plug is damaged or after the machine has been knocked down.
- Do not make any alterations to the coffee machine or power cable. The coffee machine should only be repaired by authorized service centres or qualified personnel to avoid any risks resulting from inappropriate repair.
- The machine should be sited in a place that is inaccessible to children.
- Never leave the machine ON while unattended.

Always remove the power cable from the power outlet:

- Before removing or re-installing the water tank
- To fill the water tank
- In the event of a malfunction
- When the coffee machine is not being used for long periods of time
- Before cleaning the machine.

Do not pull the power cable to disconnect the plug from the power outlet.

Precautions against burns

- Steam and/or hot water can cause burns.

Do not aim the steam jet toward yourself and/or other people, animals, materials that are sensitive to high temperatures and/or to humidity.

In the event that boiling water and/or steam escapes, beware of the danger of burns! Do not touch the hot parts of the coffee machine, i.e. the steam wand. Use the steam function or froth function only if the steam wand is immersed in a suitable container.

- When coffee is being made, water is pushed at high pressure through the coffee capsule in the capsule holder. Always ensure, before coffee is dispensed, that the capsule holder is correctly introduced and that the lever is pulled down completely.
- Do NOT lift the stop lever or remove the capsule-holder while coffee is being dispensed.

Safety notice – cutting hazard

Two sharp spikes are fitted in the capsule holder and capsule holder support. The purpose of the spikes is to pierce the coffee capsule at the top and at the bottom when the capsule is introduced in the capsule holder. Should you need to move the coffee machine to another location, you are strongly advised to grab it from the casing.

 **Caution. Follow the instructions given below in order to prevent damage to the machine:**

- Do not install or store the machine close to sources of heat.
 - Rest the machine on a level surface that is resistant to dampness and heat. The coffee machine is fitted with anti-slip feet. Beware that worktops are coated or finished with a variety of different materials and protective products, some of which may contain aggressive substances that are likely to damage or soften the feet. If in doubt, place an anti-slip mat under the machine.
 - Do not expose the coffee machine to temperatures lower than 1 °C, as the water remaining inside the water heating system may freeze and cause damage to the appliance.
 - Route the power cable in such a way as to avoid the risk of being caught up in it. Keep the power cable away from sharp edges and sources of heat.
 - Use cold tap water only to fill the water tank.
- Use fresh water at all times. Do not use fizzy mineral water or other liquids.
- To prevent the pump from working with no load and overheating, the water tank should never be left without water.

 **Caution**

The manufacturer accepts no liability for damage caused by:

- Improper use outside the defined operating parameters;
 - Repairs carried out by anyone other than authorized service centres;
 - Tampering with the power cable;
 - Tampering with any component of the machine;
 - Use of non original spare parts and accessories;
- In such cases the warranty shall be null and void.

Preliminary operations

Unpacking:

Check the appliance for damage after you have taken it out of its packing. If in doubt, do not use the appliance and contact the retailer.

The packaging materials should never be left within the reach of children since these materials can pose a hazard. They should be disposed of or stored in accordance with local environment protection regulations.

Assembling the parts of the machine that are supplied separately.

Essential and safety components of the coffee machine are factory-assembled. Some secondary elements of the appliance may be supplied in a separate packaging. The user should assemble these parts in accordance with the assembly instructions given in this booklet.

⚠ Caution: rest the coffee machine on a level surface that is resistant to dampness and heat, in a place that is out of the reach of children.

- Introduce the capsule holder into the coffee machine **(Fig. 1)**

- Pull the lever down completely **(Fig. 2)**

- Ensure that the steam and hot water dispenser knob is in the closed position. Rotate the knob fully clockwise. **(Fig. 3)**

- Ensure that the steam wand is locked. The knurled ring should be tightened in the direction shown by the arrow. **(Fig. 4)**

- Connect the power cable plug to a power outlet with grounding system. The power outlet should be easily accessible.

Before making your first cup of coffee, read these instructions and the information regarding the brand new technology incorporated in this appliance.

This coffee machine uses a single-cup capsule concept. The appliance operates with "CAFFITALY SYSTEM" capsules of fresh aromatic coffee. To provide a full, delicious aroma, one capsule makes one cup of coffee.

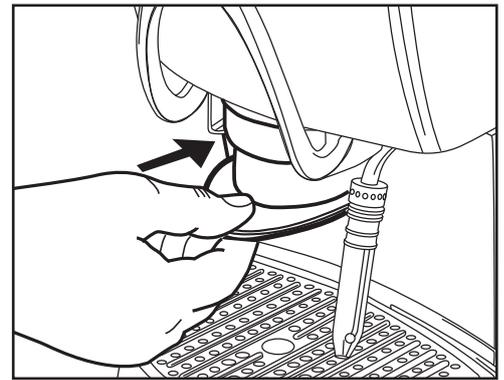


Fig. 1

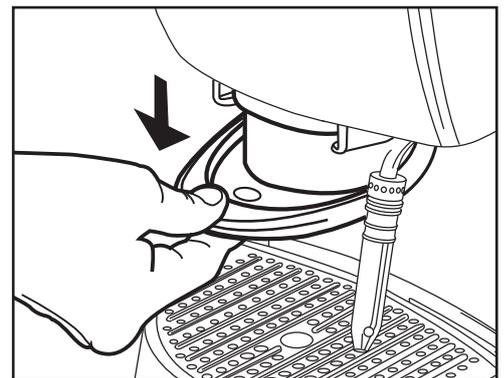


Fig. 2

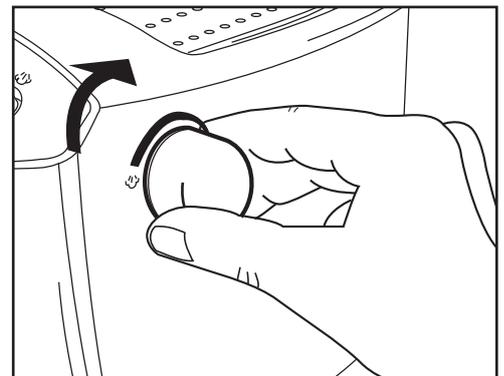


Fig. 3

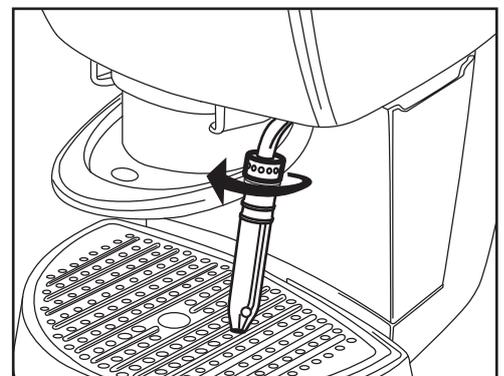


Fig. 4

All capsules are pre-packaged and sealed. You can choose from different flavours of coffee capsules depending on your preference.

Capsules can be easily identified by the Logo "CAFFITALY SYSTEM" which is a commercial product.


When the lever is pulled down, the capsule holder and the capsule in it are pushed upwards. During this step, the capsule is pierced from the bottom and from the top by two small spikes to let the water through.

Because different types of coffee require different pressures, the coffee machine is fitted with various buttons, one for each type of coffee.

The coffee making process starts once the desired button has been pressed. Hot water is pushed through the top hole into the capsule, out of the lower hole and into the cup.

As easy as that! Your coffee is ready to drink.

Insert the capsules as they are. Do not open or pierce the capsules.

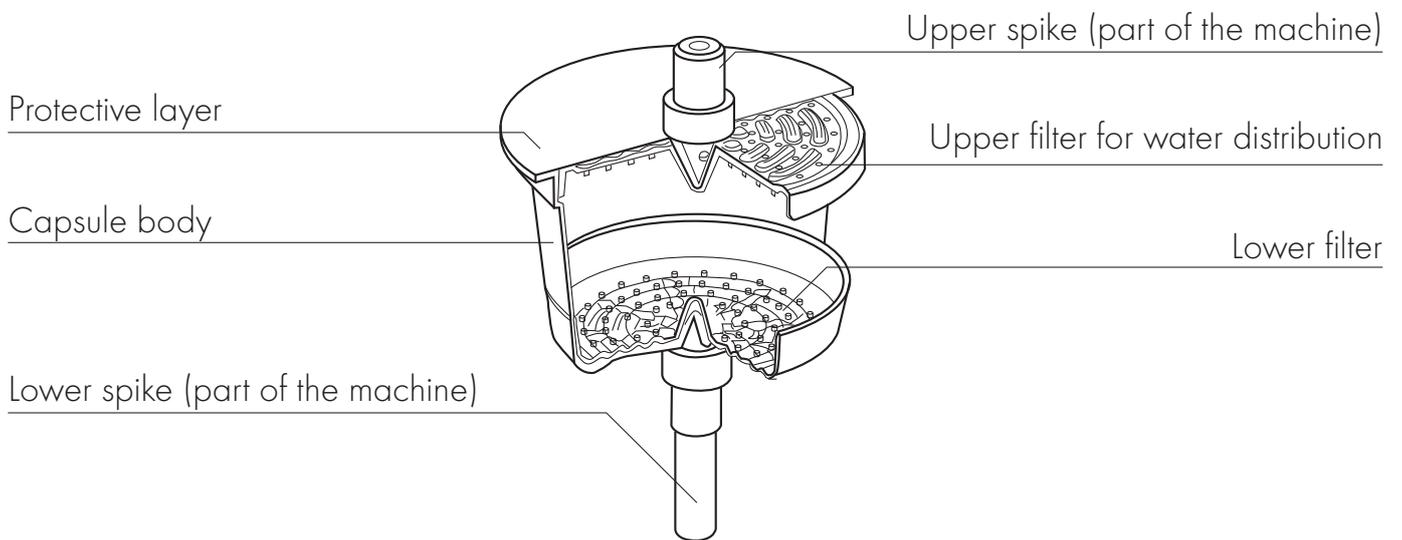

The advantages of using the "CAFFITALY SYSTEM" coffee capsules

The capsules of the exclusive "CAFFITALY SYSTEM" offer the following advantages:

- different flavours to choose from
- always ready to use
- quick coffee-making without mess
- fresh coffee sealed in ready-to-use single-cup packages

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

- This appliance has a polarized plug (one blade is wider than the other).
- To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way.
- If the plug does not fit fully into the outlet, reverse the plug.
- If it still does not fit, contact a qualified electrician.
- Do not attempt to modify the plug in any way.

1. Power lead:

A short power lead (or a removable power cable) is necessary in order to minimize the risks of tripping over or getting entangled in the cable which are normally associated with long power leads.

Long (extension) power leads can be purchased from retailers but should be used with caution.

If a long (extension) power cable is used:

1. The electrical power specifications on the power lead or extension lead must be equivalent or higher than those specified on the appliance.
2. Long power leads should be routed in such a way as to avoid having the cable dangling from the top where the appliance is installed. This will ensure that no one can accidentally trip over the cable, and will prevent children from pulling at the lead.

No detachable power-supply cord or extension cord will be supplied with the appliance, users have to purchase detachable power-supply cord or extension cord if necessary".

NOTE:

No extension cord will be provided by either ENE or Caffita.

Operating the coffee machine

Before starting the machine

- Each capsule contains the correct amount of coffee for one cup of light coffee, medium coffee or strong coffee.
- The amount of water dispensed by the machine varies depending on the type of coffee you are making: light coffee: 100 ml, medium coffee: 60 ml, strong coffee: 40 ml
- The above amounts are factory-calibrated but they can be changed to suit your personal taste. You can choose whether to increase or decrease the amount of water for each variety of capsule. More information about this option is contained in the section of this manual called "User settings according to user taste".
- Coffee is more flavoursome if served in a warm cup. To pre-heat the cup, you simply need to fill the cup with hot water and empty it before use.

- Once the coffee machine is ON and a capsule is inside the holder, it is advisable not to wait too long before using the capsule so as not to lose the flavour of the coffee.
- A used capsule should never be left inside the machine. The damp coffee that remains in the capsule after use is bound to mould just like any ground coffee or food stuff. If a used capsule is inadvertently left in the machine for a few days, clean the capsule holder in accordance with the instructions given in this manual and, if necessary, clean the spike inside the capsule-holder support, being careful not to cut yourself.
- If the machine remains out of use for more than a week, dispense a cup of hot water (as described in the next paragraph) before using it to make coffee.

Filling the water tank

- Remove the cable plug from the power outlet.
- Remove the tank from its place (**Fig. 5**) and fill the tank with cold water. (**Fig.6**)
- Put the water tank back in place and ensure that the clear hose is fully immersed in the water.
- Connect the plug to the power outlet.
- Turn ON the machine by pressing the ON/OFF switch; the buttons with the cup symbols will start blinking. When the buttons stop blinking and light steadily, the machine is ready for use.

Note:

Some water may dribble out of the capsule holder while the water is being heated. This is perfectly normal and does not jeopardize the operation of the appliance.

 Before using the coffee machine for the first time, or if the appliance has been inoperative for a lengthy period, it is recommended to dispense a cup of hot water first.

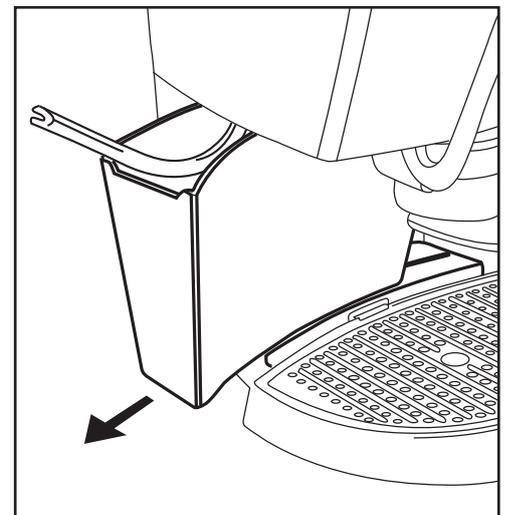


Fig. 5

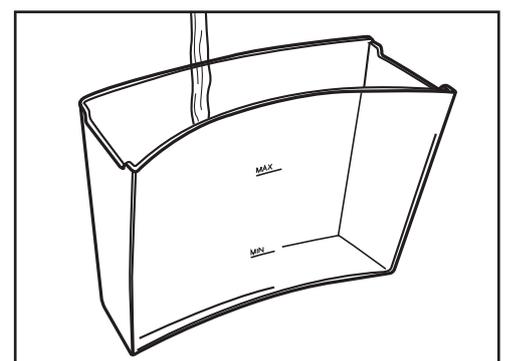


Fig. 6

Inserting a capsule

- Push up the lever. The capsule holder will be released and lowered slightly. **(Fig. 7)**
- Draw the capsule holder out of the coffee machine. **(Fig. 8)**
- Insert the capsule into the capsule holder **(Fig. 9)**

The capsule must be intact. Do not pierce or open the capsule!

- Re-introduce the capsule holder into the coffee machine and pull down the lever completely.

Making coffee

- Place a cup in the middle of the drip tray grating right under the spout of the capsule holder.
- Press the button corresponding to the desired type of coffee **(Fig. 10)**
- Once pressed, the button will start blinking, indicating that the selected type of coffee is being prepared. The coffee will flow into the cup.
- Once the selected type of coffee has been made, the coffee selection buttons will illuminate again in a steady manner.
- Push up the lever.
- Remove the capsule holder and turn it upside down to remove the used capsule.

What to do after

- If no more cups of coffee are needed, press the ON/OFF switch to turn OFF the machine.
- Insert the capsule holder without pulling down the lever. This way, the capsule holder will not weigh on the machine.

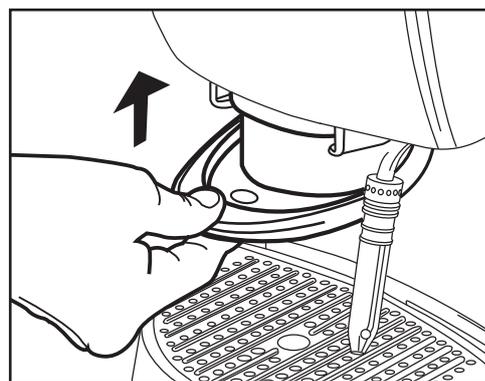


Fig. 7

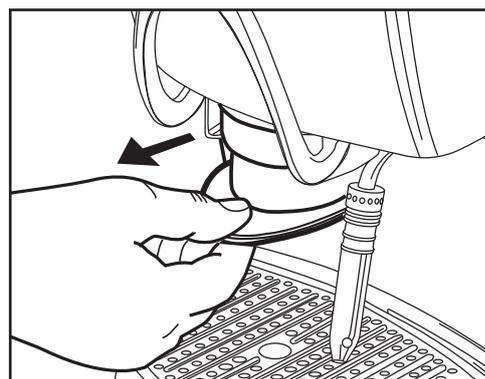


Fig. 8

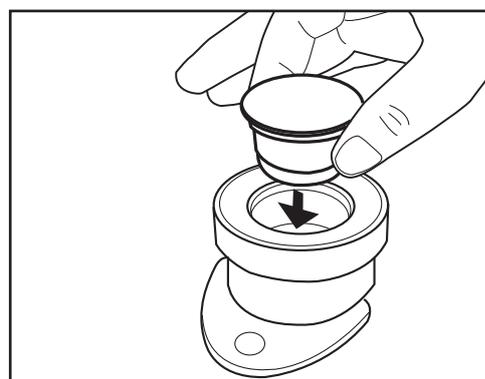


Fig. 9

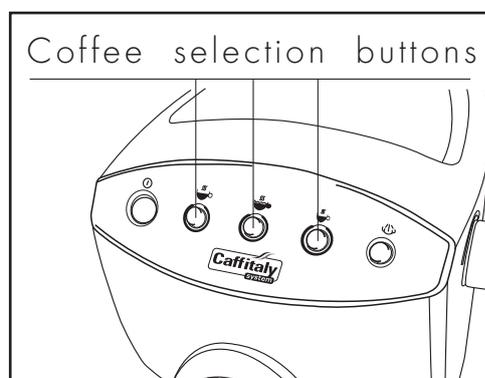


Fig. 10

The key ingredients for preparing cappuccino, espresso macchiato and latte macchiato are frothed milk and freshly made coffee.

Prepare a strong coffee as described on page 30.

Note:

The reason why should be prepared first is that the temperature required to make it is lower than the temperature required for frothing the milk, and the machine is quicker to heat up than to cool down.

For best frothing results, use cold milk (warmed up milk will not froth). Any type of milk can be used, depending on taste, as long as fat content does not exceed 3.5%.

Dispensing steam

 **Caution**

Steam and hot water can cause scalding. Never aim the steam or hot water flow towards parts of your body. Do not touch the hot parts of the coffee machine, i.e. the steam wand. Do not use

- Press the button with the steam symbol (**Fig.11**). The button light will start blinking and the machine will start heating the water to generate steam. When the button stops blinking and lights steadily, the machine is ready for use.

Note: some drops of water may come out of the capsule holder while water is being heated. This is perfectly normal and will not jeopardize the operation of the machine.

- Place a suitable container that is resistant to high temperatures under the steam wand and hold it by the handle. Slowly rotate the knob anti-clockwise. (**Fig. 12**). A small amount of water will flow out of the steam wand.

Note:

Steam may come out mixed with water at first This is perfectly normal and will not jeopardize the operation of the machine.

- When the flow of hot water turns into a flow of steam, stop the function turning the knob clockwise.

The coffee machine is now ready to froth milk.

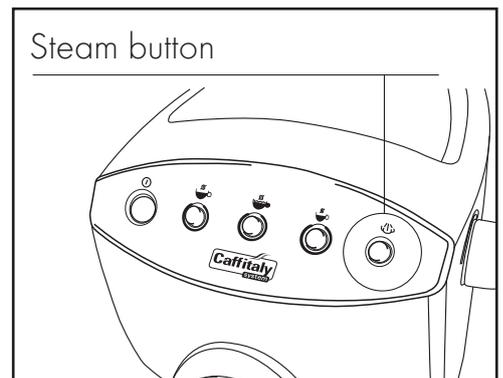


Fig. 11

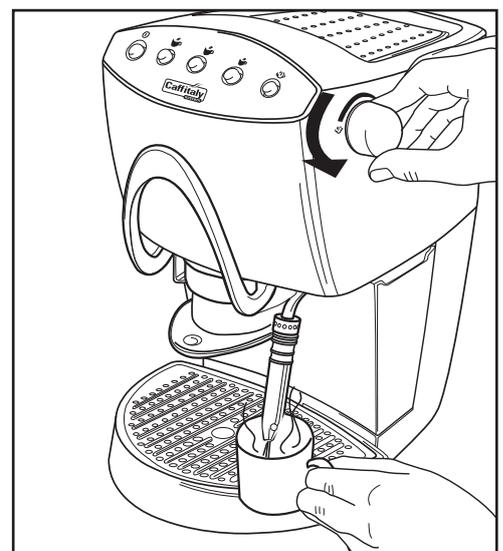


Fig. 12

Frothing milk

- Fill a cup or small jug half way with cold milk.
- Place the receptacle under the steam wand so as to place the nozzle of the steam wand in the milk to be heated. Turn the knob slowly anti-clockwise while gently rotating the receptacle. Ensure that the steam nozzle remains just below the milk surface at all times during this step. **(Fig. 13)**
- When a sufficient amount of froth has been dispensed, turn the knob clockwise.

Caution:

The steam wand is hot after use. Do not touch it with bare hands but use a cloth.

Note:

Do not wait too long before cleaning the steam wand. Milk deposits are hard to remove. Once the froth has been made, we recommend placing a cup with water under the steam wand and starting the steam dispensing function again for a few 1-2 seconds. This way, any residue of milk will be easily removed from the nozzle.

Make sure the lateral hole of the steam wand is not clogged **(Fig. 14)**
Poke it clear with a needle if necessary.

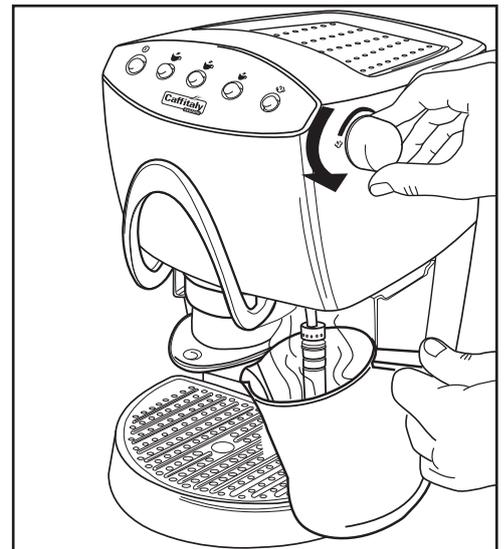


Fig. 13

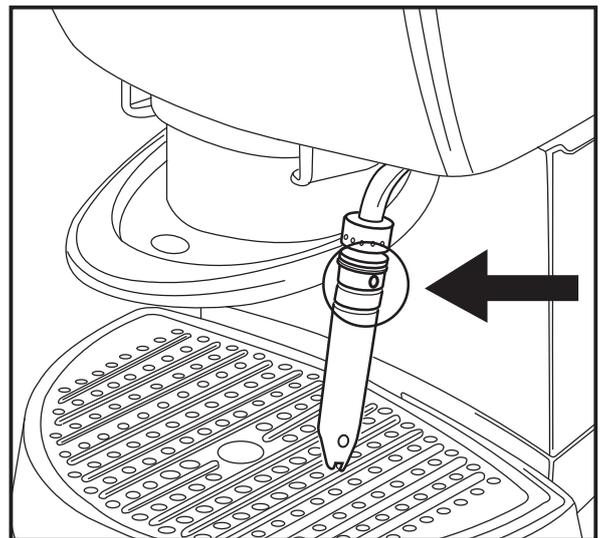


Fig. 14

Cooling the coffee machine

The coffee making function requires a lower temperature than the steam dispensing and froth making functions. If you wish to make a coffee and you have just used the steam function, you should allow the appliance to cool down first. However, a short-cut is possible:

- Press the button with the steam symbol (the light in it should be steady).

The steam button and the espresso button will start blinking (**Fig. 15**)

- Place and hold a suitable receptacle under the steam wand.

Turn the knob slowly anti-clockwise (**Fig. 16**). The steam wand will dispense steam first and then hot water.

- When the coffee selection buttons illuminate steadily and the steam button light turns out, turn the knob full clockwise.

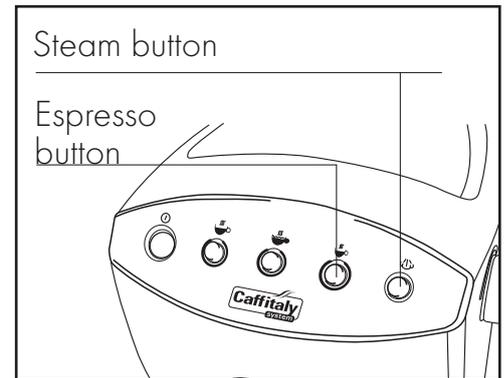


Fig. 15

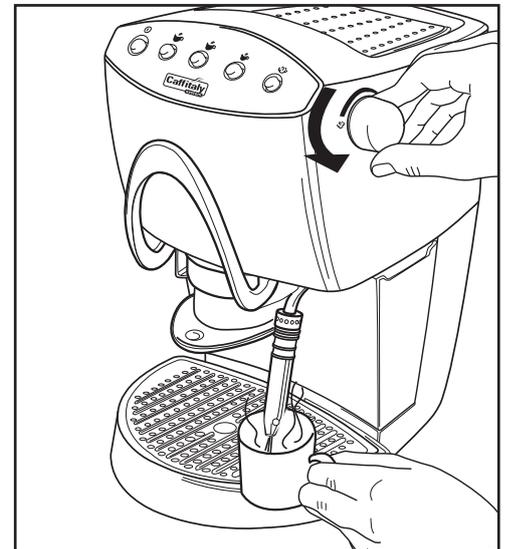


Fig. 16

Hot water function

This function is convenient to prepare tee and hot beverages.

- Press the ON/OFF button to turn ON the appliance. The coffee selection buttons will blink. When they stop blinking and light steadily, the appliance will be ready for use.

- Place a suitable receptacle under the steam wand. Slowly rotate the knob anti-clockwise. (**Fig.16**). Hot water will flow out of the steam wand.

- Once the desired amount of hot water has been dispensed, stop the function turning the knob fully clockwise.

User settings according to user taste

Default settings control the amount of water that is dispensed for each type of coffee. These settings can be changed by the user to his /her liking in order to make a stronger or weaker coffee.

For each type of coffee, the user can set one amount of water only.

- Insert the capsule into the capsule holder.
- Pull the lever down.
- Place a cup in the middle of the drip tray grating.
- Press the ON/OFF switch button to turn ON the appliance. The button will start blinking. When the button stops blinking and lights steadily, the machine is ready for use.
- Press the button, corresponding to the amount of water to be set and keep it pressed. Default settings can be changed for light, medium and strong coffee.
- When the desired amount of water has been dispensed, release the button. The machine will then learn the new amount.
- Check if the new setting is correct. If not, repeat the procedure.

Note:

The coffee machine incorporates an advanced electronic system to control its numerous functions for making coffee and dispensing steam.

To prevent malfunctions, do not turn on the coffee machine immediately after turning it off. Wait about 10 seconds before switching it on again. Also, adhere to the operating instructions.

Resetting the default settings

The Reset function allows the user to return to factory settings after he/she has made personalised settings.

- Press the ON/OFF switch button to turn OFF the appliance.

Press and hold the two buttons shown by the figure simultaneously (**Fig. 17**) (strong coffee and light coffee)

- Turn ON the machine by pressing the ON/OFF switch.
- Release the buttons after 5 seconds.
- Press the ON/OFF switch button to turn OFF the appliance.
- Turn ON the machine again by pressing the ON/OFF switch.

The default settings are now reset.




Fig. 17

Meaning of the indicator lamps on the control panel

The lamps incorporated into the control panel buttons are used to inform the user about the function that is being performed.

As illustrated below, their meaning changes depending on whether one or more buttons are blinking or are steadily illuminated.

Heating

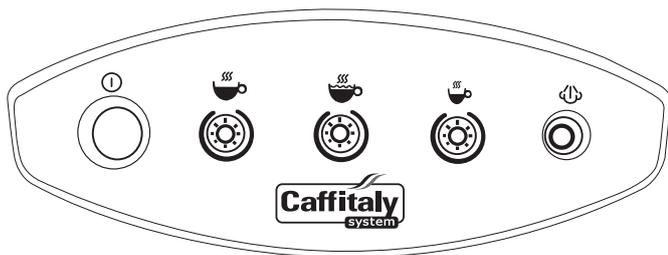


Machine ready




Making coffee

(the blinking button is the one corresponding to the selected control)

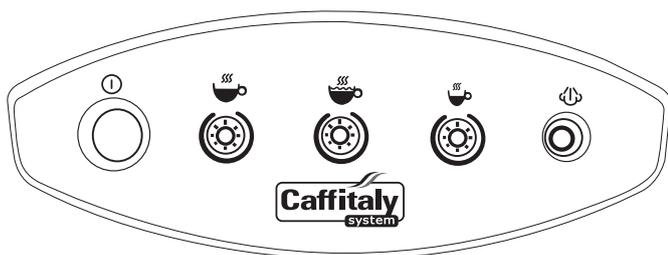

Heating water to dispense steam

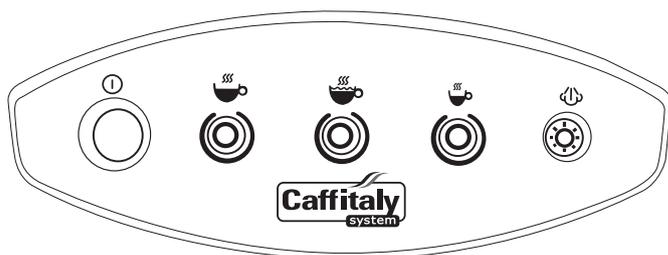


Machine ready to dispense steam



Cooling



Error

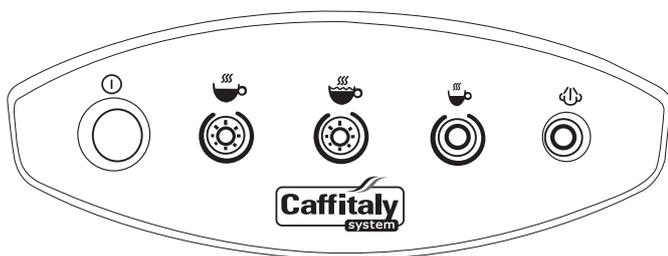

Key to indicator lamps:

- Lamp OFF
- Lamp ON steadily
- ⚙ Lamp blinking

Cleaning the machine

Danger

- Before attempting to clean the appliance, remove the plug from the power outlet.
- Do not immerse the machine, plug and/or power cable in water or other liquids.

Caution

- Allow the machine to cool before starting the cleaning procedure.

Cleaning the casing and cup shelf.

Clean the casing and cup shelf with a soft damp cloth.

Cleaning the drip tray and grating

The drip tray and grating can be washed by hand or in the dishwasher.

- Slightly lift the tray at the front and remove it from the appliance.
- Clean the drip tray and grating and dry.
- Reinstall the grating to the drip tray and insert them into the coffee machine.

Cleaning the water tank

Clean the water tank at least once a week:

- Remove the water tank from the appliance.
 - Rinse it under running water and then dry.
- The water tank is not dishwasher safe.
- Reinstall the water tank to the appliance.

Cleaning the capsule holder

The capsule holder consists of two elements, both of which should be removed before cleaning.

- Remove the capsule holder from the coffee machine (**Fig.18**)
- Rotate the top of the capsule holder anti-clockwise to the stop. (**Fig.19**)
- Extract the top of the capsule holder by pulling it upwards (**Fig.20**)
- Wash both elements using warm water and a small amount of soap. Rinse thoroughly with water and then dry. The capsule holder is not dishwasher safe.
- Introduce the top into the lower portion of the capsule holder and rotate the top clockwise to the stop. Check both elements for proper installation.
- Re-introduce the capsule holder into the coffee machine leaving the lever in the up position.

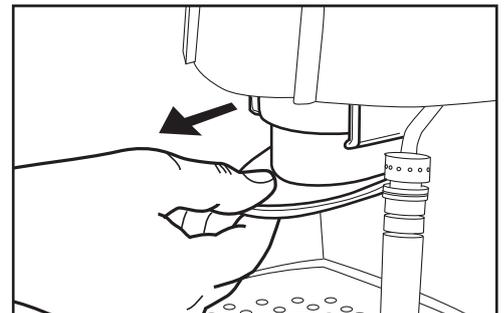


Fig. 18

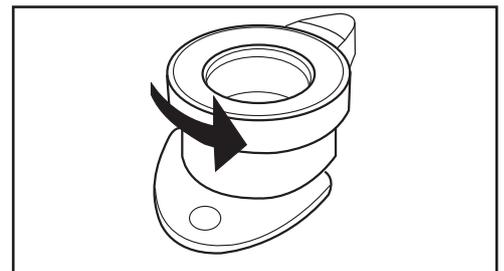


Fig. 19

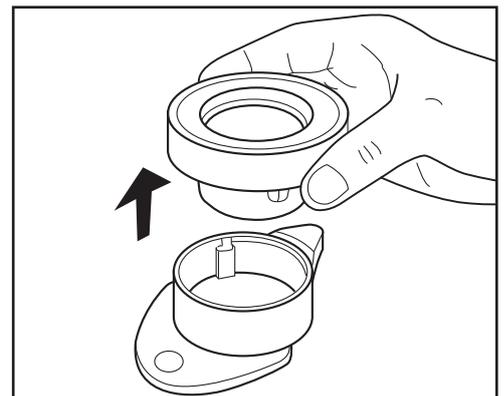


Fig. 20

Cleaning the steam wand

To ensure the best hygiene conditions, we recommend cleaning the parts that come into contact with milk immediately after use.

Caution

The steam wand is hot after dispensing steam.

- Remove the cap from the steam wand by pulling the cap downwards (**Fig.21**)
- Loosen the knurled ring on the inner hose and remove the hose by pulling it down. (**Fig.22**)
- Clean the steam wand. If the nozzle is clogged, free the hole using a needle or similar object.
- Thoroughly clean the hose and cap with hot water. Hose and cap are not dishwasher safe. Rinse both parts thoroughly under running water and then dry.

Note:

Make sure the lateral hole of the steam wand is not clogged (**Fig. 23**)

Poke it clear with a needle if necessary.

- Reinstall both parts. Installation is the reverse procedure of removal. Finally, check for proper installation

De-scaling

Caution

By de-scaling the machine at regular intervals, you will ensure longer machine durability. Moreover, a regularly de-scaled machine reduces power consumption.

How often the machine needs to be de-scaled depends on how often it is used and on water hardness.

Contact the competent local board to find out the water hardness level in your area. The machine should be de-scaled when you notice a general slowing down paired with unusual noises.

Notice

- Use a commercially available de-scaling fluid that is environmentally-friendly and suitable for automatic coffee machines.
- Follow the manufacturer's directions on the package.
- Another environmentally friendly method of de-scaling your coffee machine consists in using a mix of water and citric acid or water and vinegar.
- Do not use formic-acid-based de-scaling agents

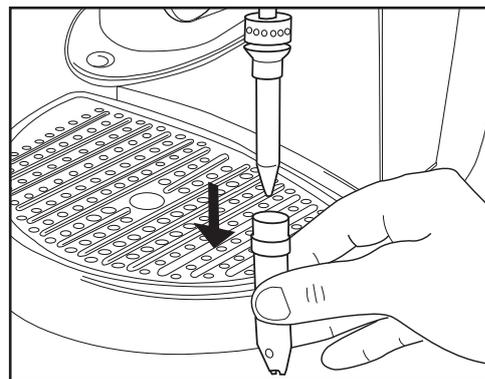


Fig. 21

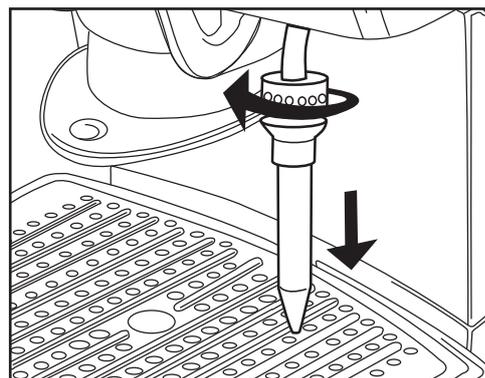


Fig. 22

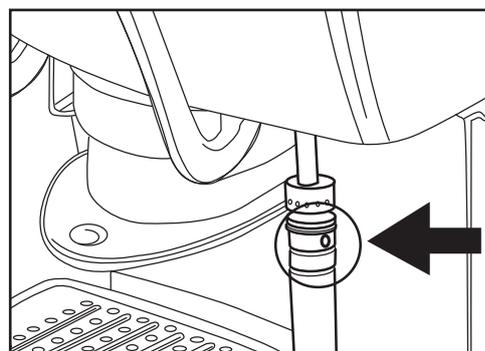


Fig. 23

To de-scale the machine, carry out the following procedure:

1. Mix the de-scaling agent with water according to manufacturer's instructions and pour the mix into the machine's water tank.
2. Place a suitable receptacle under the steam wand.
3. Press the ON/OFF button and wait until the heating process is completed, i.e. when the buttons with the coffee symbols illuminate steadily.
4. Turn the knob and dispense a cup of hot water. Turn off the machine by the ON/OFF button and leave in the de-scaling agent for about 10-15 minutes. Repeat steps 3 and 4 until the full amount of de-scaling mix has been ejected.
5. When the de-scaling procedure is complete, turn the knob clockwise to the stop and turn OFF the machine.
6. Remove the water tank from the machine.
7. Thoroughly rinse the water tank, fill it under running water, and reinstall it to the machine ensuring that the clear hose is fully immersed in the water.
8. Press the ON/OFF button to turn ON the machine and wait until the buttons with the coffee symbols stop blinking.
9. Place a receptacle of adequate capacity under the steam wand.
10. Turn the knob until 2/3 of the tank water has been dispensed.
11. Return the knob to the zero position and allow the machine to reach its operating temperature again.
12. Use the knob again to dispense the remaining amount of water.
13. Do not forget to return the knob to the off position at the end by turning it clockwise!
14. The final step of the de-scaling process consists in letting hot water flow through the capsule holder. To do this, simply follow the standard procedure for making caffè lungo, with the capsule holder installed but with no coffee capsule in it.

De-scaling the natural way

A more environmentally friendly procedure consists in using an easy-to-make mix of water and citric acid or water and vinegar (do not use vinegar essence).

Mix together 4 parts water and 1 part vinegar or citric acid.

Pour the mix into the water tank and follow the same procedure described above.

Trouble	Solution
The machine will not operate when the coffee selection buttons are pressed	The lever was not properly pulled down. Pull down the lever.
No coffee comes out	<ul style="list-style-type: none"> • There is no water in the tank. Fill it up • The clear hose inside the tank is not fully immersed in the water. Plunge it in.
Coffee comes out slowly, in drips	Scale has built up in the machine. De-scale the machine.
The amount of coffee dispensed is inadequate	<ul style="list-style-type: none"> • You have pressed the wrong button (if the "strong coffee" button is pressed, the machine will only dispense 40 ml / 1.4 ounces of water). Press the right button. • The amount of water was improperly set. Set the amount of water as described in the section "User settings according to user taste"
Coffee does not taste good	<ul style="list-style-type: none"> • There is a used capsule in the machine. Each capsule can only be used once. Use a new one. • The amount of water was improperly set. Set the amount of water as described in the section "User settings according to user taste".
Froth is not creamy enough, or the froth-making process takes too long	<ul style="list-style-type: none"> • The milk used is too hot, off, or contains an excessively high percentage of fat. Use fresh cold milk (max.3.5 % fat) • The steam wand is dirty. Clean it. • Scale has built up in the machine. De-scale the machine.
The machine will not dispense steam	<ul style="list-style-type: none"> • The water tank is empty. Fill it! • The clear hose inside the tank is not fully immersed in the water. Plunge it in. • The machine has not reached the required temperature. Wait till the steam button illuminates steadily
The selection buttons for caffè lungo and cream coffee are blinking	An error has occurred. Turn off the machine and then turn it on again.

Warranty

The warranty on the machine applies to the provisions in force.

The machine has been manufactured using the latest production methods and has undergone strict quality tests.

During the warranty period, the manufacturer will replace any faulty parts free of charge and repair any defects in workmanship.

The warranty does not cover damage resulting from improper use and from a failure to descale the machine and excludes wear components and consumables.

